

How to fit an F connector to your existing co-axial cable.

You will need a sharp knife and an F connector.
It is a dual pack because we do not know which size cable you have.

Part no. FC6-FC59 - P Choose the appropriate connector for your cable.


1. Strip the outside of the cable to 12mm. (diag F1.)

2. Strip the next layer to 6mm. (diag F2.)

3. Pull back the strands back along the outside of the cable. (diag F3.)

4. Twist on the 'F' connector clockwise until the white inside is flush with the inside of the connector. (diag 4.)

5. The tip of the wire should protrude approximately 1mm out of the end of the 'F' connector. (diag F5.)

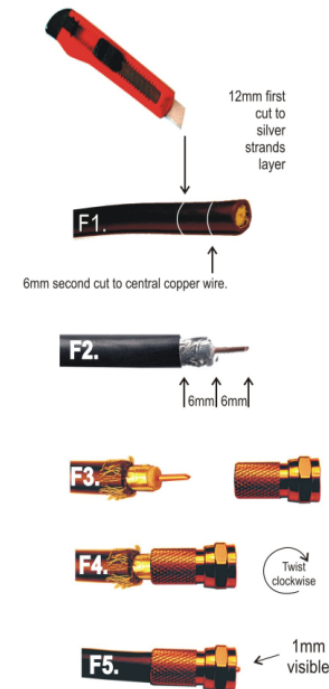

PM4 -P Wall Plate Fitting instructions.