


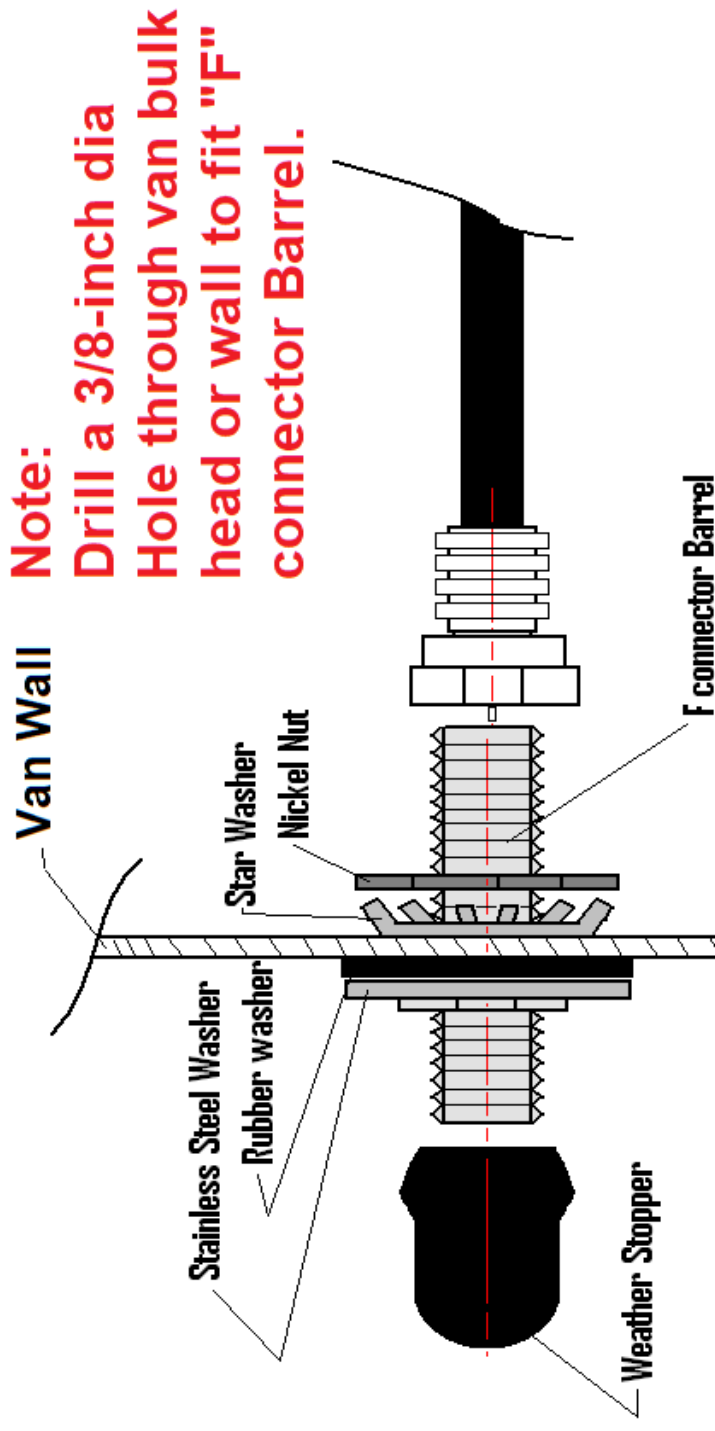

Note:
 Drill a 3/8-inch dia
 Hole through van bulk
 head or wall to fit "F"
 connector Barrel.

PM8 Assembly Diagram